



# M7 Start

## User Manual

## TABLE OF CONTENT

TABLE OF CONTENT .....	2
FOR YOUR SAFETY .....	3
GETTING STARTED .....	4
CALLS .....	5
INPUT METHOD .....	7
FUNCTION LIST .....	8
WARNINGS AND NOTES .....	14
SPECIFICATIONS .....	16
DECLARATION OF CONFORMITY .....	16

## FOR YOUR SAFETY

Read these simple guidelines. Not following them may be dangerous or illegal.

### **SWITCH OFF IN HOSPITALS**

Follow any restrictions. Switch the device off near medical equipment. Do not use the device where blasting is in progress.

Please keep this cell phone away from children, as they could mistake it for a toy, and hurt themselves with it.

Don't try to modify the phone except by the professional.

Warning!

Only use the authorized spare parts, otherwise it may damage the phone and the warranty will not work. And it may be dangerous.

### **SWITCH OFF WHEN REFUELING**

Don't use the phone at a refueling point. Don't use near fuel or chemicals.

### **SIM CARD AND T-FLASH CARD ARE PORTABLE**

Pay attention to these small things to avoid children eating them.

Notice: The T-Flash Card can be used as a Memory Disk, the USB cable is necessary.

### **BATTERY**

Please do not destroy or damage the battery, it can be dangerous and cause fire.

Please do not throw battery in fire, it will be dangerous

When battery cannot be used, put it in the special container.

Do not open the Battery.

If the battery or the charger is broken or old, please stop using them.

### **USE QUALITY EQUIPMENT**

Use our authorized equipment or it will cause dangers

### **ROAD SAFETY COMES FIRST**

Give full attention while driving; Pull off the road or park before using your phone if driving conditions so require.

### **INTERFERENCE**

All wireless devices may be susceptible to cause interference, which could affect performance.

### **SWITCH OFF IN AIRCRAFT**

Wireless devices can cause interference in aircraft. It's not only dangerous but also illegal to use mobile phone in an aircraft.

**Warning:** We take no responsibility for situations where the phone is used other than as provided in the manual.

Our company reserves the right to make changes in the content of the manual without making this public. These changes will be posted on the company website to the product it amends.

The contents of this manual may be different from that in the product. In this last case will be considered.

## **GETTING STARTED**

### **Battery Install Notice**

Before you install or change battery, please ensure you already turn off the phone.

### **Install or change SIM card Notice**

1. Before you change SIM card, please make sure you already turn off the phone and dispose battery.
2. Insert the SIM card and make the golden contact area face down and the nick face out.

### **Charge the battery**

1. Before charging the battery, please make sure that the battery is installed properly in the phone.
2. Connect the charger lead to the phone socket, and then connect the charger to the AC socket.
3. If the phone is off when it's charging, charging indicator is displayed on the screen. If the phone is on when it's charging, user can use it while charging. When the battery is fully charged, the charging indicator on the screen is full and stops twinkling. While using the handset for the first time, please completely discharge and then completely charge the battery. Repeat the process for three times to achieve the full performance of the battery.
4. Long period unused or some other reasons may cause low battery pressure, so at the beginning of charging the screen is black and it may take a while before the charging indicator appears.

Warning: When charging, in order to avoid serious damage to phone circuitry, do not remove or dispose the battery.

## **CALLS**

### **Key Explanation**

- Lock/unlock keypad: press *Right Shortcut* key then # key.
- “\*”, “0” and “#” keys:

Functions vary in different situations or function menus:

- In inputting status, “\*” for symbols.

- In inputting status, “#” to switch inputting methods.
- In standby mode, hold “#” to switch the phone in silent mode.
- In standby and dial mode, press and hold “\*”, you can input +, P and W.
- In standby mode, long press “0” to activate/deactivate Energy Saver mode.

### **Main Menu Explanation**

When you press Menu key, you will enter main menu. Press up, down, left and right keys to select different functions.

#### **Make a Call**

Making a call by dialing numbers:

1. In standby mode, enter the phone number. If you want to change the numbers, press left and right direction key to move the cursor and press Clear to delete a number. Press and hold Clear to delete all characters.

2. Press the call key to call the number.

Making a call using the Phonebook:

You can enter the phonebook list from functional menu, choose or input the needed letter (phonetic) to search. Choose the number; press the call key to dial out.

Call the Dialed calls, Received calls, Missed calls:

1. In standby mode, press the call key to view the call log list.
2. Choose a number and press the call key to dial.

Making a call using the menu:

1. In standby mode, enter the menu, choose Call Center;
2. Choose from missed calls, dialed calls, and received calls.
3. Choose the needed number and press the call key to make a call.

## **Answer an Incoming Call**

Press the Call key to answer an incoming call.

### **Call Options**

Offer numerous in call functions (some of these functions need a subscription with the service provider).

During the call, press->Option and choose between the following options :

Hold: Pause the call.

End single call: End the present call.

Phonebook: Same as phonebook list in the function menu.

Call history: Same as call history in the function menu.

Messaging: To explore the Messaging Menu.

Sound recorder: Record the sound.

Mute: Enable the mic of phone not work.

Volume: To adjust the volume of the call.

## **INPUT METHOD**

### **Overview**

Your phone offers input methods as followings: Smart abc, es, ro.

### **Keypad Definition**

The definition of keypad is as follow:

Left key: Enter and OK

Right key: Back and Cancel

Navigate Keys: Cursor move or choose word.

# Key: Switch input methods and a sign will be display in left side.

2-9 key: Input the letter on the keys when input.

\* Key: Input punctuation.

## FUNCTION LIST

### **Phonebook**

You can save the contacts in the mobile phone and SIM card; it depends on the SIM card memory capacity. When you select a contact, you can do the following operations:

View: To view the contact

Send text message: Send text message to the current number.

Send multimedia message: Send multimedia message to the current number.

Call: To Call the current number.

Edit: To edit the current contact.

Delete: To delete the current contact.

Copy: To copy the contact from phone to SIM card /phone or from SIM card to SIM card /phone or copy to file.

Phonebook settings: To set the Phonebook.

### **Call logs**

In this function menu, you can check the Dialed calls, Received calls, Missed calls, and You can perform



the following operations:

View: To check the call history.

Call: To call the Dialed calls, Received calls or Missed calls.

Send text message: Send SMS to the Dialed calls, Received calls or Missed calls.

Send multimedia message: Send MMS to the Dialed calls, Received calls or Missed calls.

Save to Phonebook: You can add the number to the phonebook or replace existing contacts.

Edit before call: Edit the number before you call

Delete: Delete the current call history.

### **File manager**

Press left key option to enter functional menu, the following options are available:

- Open: See the files in the different folders of your phone
- Format: To format the folder.
- Details: To view the Memory status of the Memory card.

### **Camera**

The built-in camera allows you to take photos and adjust the camera settings. The options menu contains the following choices:

Photos: view photo gallery

Camera settings: change flicher rate and delay timer

Image settings: select the image size and image quality

White balance: select white balance preset

Scene mode: auto/night mode

Restore default: restore the default camera settings

## **Image Viewer**

The options for image viewer are as follows:

- View: To view a photo.
- Image information: You can view the image information.
- Browse style: To select the mode for browsing photos.
- Send: Transform the photos by different ways, such as multimedia message or via Bluetooth.
- Use as: This photo can be used as wallpaper.
- Rename: To rename the selected image or photo.
- Delete: To delete the selected photo.
- Sort by: To sort photos by the desired method.
- Storage: Allows you to set the location of the photos.

## **Audio Player**

This phone comes with an inbuilt audio player that plays all your favorite songs. It gives you a host of setting options to make your listening experience interesting.

1. Play: To start playing the audio file.
2. Details: To show the details of the selected file.
3. Refresh list: To refresh the audio file list.
4. Settings: To set parameters for audio playing.

## **Video Player**

The Video Player plays all your video files stored in the phone (Phone Memory or on the Memory Card).

The video player gives you the following options:

1. Play: To start playing the video file.
2. Send: Send the video via Bluetooth or MMS.

3. Rename: To rename the video.
4. Delete: To delete the video.
5. Sort by: To sort videos by the desired method.

### **Sound Recorder**

You can record sound/voice on your phone. Just select sound recorder, go to options and press “New record”. Select Stop to save it. Select pause to ‘pause’ the recording and ‘continue’ to resume the recording.

### **FM Radio**

- Channel list: List out all the current channels. You can enter channel list, edit it and display the searched channel list.
- Manual input : Input the desired broadcasting channel manually
- Auto Search: Search and create the channel’s list automatically.
- Settings: To set some parameters of FM.

### **Messaging**

Your phone supports various messaging services. You can create, send, receive, edit and organize text/multimedia messages.

Messages contain the following folders:

- Write Message: On selecting Write Message, you can input the contents of the message using different input methods.
- Inbox: All the received messages stored in conversations.
- Drafts: You can save a message you edit in the drafts.
- Outbox: You can see a list of messages that will be send.
- Sent messages: You can see a list of the sent messages.

- **Message Settings:** Message settings store all the different settings responsible for sending and receiving messages.

### **Browser**

The following options are available in the Browser menu:

- a. **Homepage:** Start a connection to the selected URL set.
- b. **Bookmarks:** Access or edit a bookmark.
- c. **Search or input URL:** Enter the address.
- d. **Recent pages:** Browse a saved URL.
- e. **Settings:** Set parameters of WAP browser. Please consult your network operator for details of the parameters

### **Bluetooth**

The following options are available in the Bluetooth menu:

1. **Power:** On/Off
2. **Visibility:** On/Off
3. **My device:** Inquiry new device or display paired devices and take the options.
4. **Search audio device:** Search for audio devices.
5. **My name :** You can change the name of the Bluetooth.
6. **Advanced :** Configure the settings of Bluetooth, For example, Audio path, storage etc.

### **Calendar**

You can use the calendar to keep track of important meetings. After entering the calendar function menu you can select year, month and date using direction keys. On a selected date you can select to view:

- **Jump to date:** To input the date to enter the calendar, then move the cursor to the specified date.
- **Go to today:** Go to check today.

- Go to weekly view: Go to view the calendar events in weekly style.

## **Alarm**

The Alarm can be set to ring at a specific time on several days. There are five different default alarms. You can set these alarms to alarm you at different time in specific day(s) of a week.

To set an alarm:

1. Press edit to enter alarm settings menu.
2. Select edit option using up and down direction keys
  - ON/OFF: Select alarm on or off using left and right direction key
  - Alarm time: Input alarm time
  - Repeat Setting: Press navigation keys to select alarm types which consists of one time, everyday and custom.
  - Alert Type: To select between Ring only/Vib and ring, Vib only.

## **Settings**

Under settings, the phone gives you the option to change the settings for various features of the phone. The following list is available in Settings:

### **1. Dual SIM settings**

Here you can set if only one or both SIM should be active. Also you can set on or off the Flight mode.

### **2. Phone Settings**

You have following options listed under phone setup:

**Time and date:** Let you set the Time and date on the phone.

**Language:** To select language for the phone.

### **Preffered input method**

**Display:** Under Display setup, you can set wallpaper, and the date/time preview.

**Dedicated key:** You can set what function to open with the navigation keys.

**UART settings:** You can select UART 1 or UART 2.

**Misc. settings:** Set LCD backlight.

### **3. Network Settings**

Network setup gives the user the ability to select a desired network and addition of a new network to the network list. The network setup gives you the follow options:

#### **4. Security Settings**

Under Security Setup, you can change the security settings of SIM1, SIM2 and phone security. Also you can change the setting for auto keylock function.

#### **5. Connectivity**

Bluetooth: turn on/off the bluetooth function and set the parameters

Data account: set the data accounts for data transfer via mobile networks

#### **6. Restore Factory Settings**

Selecting this option will ask you to enter the password to restore the phone to factory settings. The default password is '1122'.

## **WARNINGS AND NOTES**

### **Operational Warnings**

**IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.** Read this information before using your phone. For the safe and efficient operation of your phone, observe these guidelines:

**Potentially explosive at atmospheres:** Turn off your phone when you are in any areas with a potentially explosive atmosphere, such as fueling areas (gas or petrol stations, below deck on boats),

storage facilities for fuel or chemicals, blasting areas and areas near electrical blasting caps, and areas where there are chemicals or particles (Such as metal powders, grains, and dust) in the air.

**Interference to medical and personal Electronic Devices:** Most but not all electronic equipment is shielded from RF signals and certain electronic equipment may not be shielded against the RF signals from your phone.

**Audio Safety:** This phone is capable of producing loud noises which may damage your hearing. When using the speaker phone feature, it is recommended that you place your phone at a safe distance from your ear.

**Other Media Devices, hospitals:** If you use any other personal medical device, consult the manufacture of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

**Product statement on handling and use:** You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

Always treat your phone and its accessories with care and keep it in a clean and dust-free place

Do not expose your phone or its accessories to open flames or lit tobacco products.

Do not expose your phone or its accessories to liquid, moisture, or high humidity.

Do not drop, throw, or try to bend your phone or its accessories

Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.

Do not attempt to disassemble your phone or its accessories; only authorized personnel must do so.

Do not expose your phone or its accessories to extreme temperatures, minimum 32 and maximum 113 F degrees (0 to 45 C degrees).

**Battery:** Your phone includes an internal lithium-ion or lithium-ion polymer battery. Please note that use of certain data applications can result in heavy battery use and may require frequent battery charging. Any disposal of the phone or battery must comply with laws and regulations pertaining to lithium-ion or lithium-ion polymer batteries.

**Faulty and damaged products:** Do not attempt to disassemble the phone or its accessory. Only qualified personnel must service or repair the phone or its accessory. If your phone or its accessory has been submerged in water, Punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

## SPECIFICATIONS

General	2G Network	GSM 900/1800 Mhz
	Dimensions	118,98x51,93x11,91 mm
Dimension	Weight	80 g
	Type	TFT, 262 K colors
Display	Dimensions	240 x 320 px, 2,4"
	Alert type	Sound; vibration
Sound	Speaker	Yes
	Stereo	Yes (with earphones - jack 3.5 mm)
	Contacts	300 entries
Memory		



	External	microSD, up to 32GB (not included)
<b>Data</b>	Bluetooth	Yes (2.0) cu A2DP and EDR
	USB	Yes (2.0, micro USB)
<b>Camera</b>	Main	VGA
	Secondary	No
	Digital zoom	Yes
<b>Characteristics</b>	Messaging	SMS, MMS
	FM Radio	Yes
	WAP	Yes
	Games	No
	Clock	Yes
	Alarm	Yes
	Calculator	Yes
	Sound recorder	Yes
<b>Battery</b>	Type	Li-Ion 1000 mAh
	Stand-by	Up to 140 hours
	Talk time	Up to 315 minutes
<b>Package content</b>	M7-Start dual-SIM mobile phone;	
	User manual;	
	Warranty;	
	Battery 1000 mAh;	

	Earphones:
	USB data cable:
	Charger 220V/5V 500mA

## DECLARATION OF CONFORMITY

NO.1277

We, SC VISUAL FAN SRL, importer located in Brasov, 61 Brazilor STR., registered at the Commerce Chamber Brasov no. J08/818/2002, CUI 14724950, assures, guarantee and declare on our own responsibility, in accordance with art.4 from HG nr. 1.022/2002 regarding the statute of the products and services that can jeopardize life, health, work security and environmental protection, that: The product M7 Start – mobile phone ALLVIEW brand - and the accessories that came with the product: 220V charger, headphones and battery don't jeopardize life, health, work security and environmental protection and they are according to:

-Directive. 2011/65/EU regarding the restriction of use of certain substances in electrical and electronic equipment.

- The Stipulations of HG nr.982/2007 witch transpose the essential requirements specified in Direction 2004/108/CE, regarding electromagnetically compatibility;

- The Direction regarding the low voltage equipment users assurance 73/32/CEE, modified by Direction 93/68/CEE (HG 457/2003) and tests EN 55013:2001+A1:2003+A2:2006, EN 55020:2007, EN 61000-3-2:2006, EN 61000-3-3:1995+A1:2001+A2:2005;

- The Direction regarding the radio and telecommunication equipments R&TTE 1999/5/CE (HG 88/303).

- The safety requirements of the European Directive 2001/95/EC and of EN standards 60065:2002/A12:2011 and EN 60950-1:2006/A12:2011, of the decibels level emitted by the sold devices.

The Product described upstairs in this Declaration and all the accessories are according to the next standards:

- Health EN 50360, EN 50361;
- Safety EN 6095-1;
- EMC EN 301 489-1-7/17;
- Radio spectrum EN 301511 EN 300328;

After the performed tests emerge that the samples comply with the upstairs specification, as the test results show. Documentation is stored on VISUAL FAN LTD - Brasov, 61 Brazilor STR.

Also available on web: [www.allviewmobile.com](http://www.allviewmobile.com)

**CE 0700**

**SAR value: 1,289W/kg**

**Director**  
**Gheorghe Cotuna**





# M7 Start

## Manual de utilizare

## CUPRINS

CUPRINS.....	21
MASURI DE SIGURANTA.....	22
PRIMA UTILIZARE .....	23
APELARE .....	24
METODA DE INTRODUCERE TEXT .....	26
LISTA FUNCTII .....	26
DE LUAT IN CONSIDERARE.....	32
SPECIFICATII .....	34
DECLARATIE DE CONFORMITATE.....	34

## MASURI DE SIGURANTA

**IMPORTANT!** Va rugam sa cititi cu atentie aceste instructiuni si urmati-le implicit, în caz de situații periculoase.

**Siguranta in conducere:** Este recomandat sa nu folositi telefonul mobil in timp ce conduceti. Daca trebuie sa-l folositi, intotdeauna folositi sistemul de "Maini libere" cand conduceti.

### **Inchideti telefonul mobil cand sunteti in avion**

Interferentele cauzate de telefoanele mobile afecteaza siguranta aviatiei, si, astfel, este ilegal sa-l folositi in avion. Va rugam asigurați-va ca telefonul mobil este oprit atunci cand sunteti in avion.

Inchideti telefonul mobil in zona de operatii de sablare.

**In spital:** Atunci cand folositi telefonul intr-un spital, trebuie sa va supuneti normelor relevante specificate de catre spital. Orice interferenta cauzata de echipamentele wireless poate afecta performantele telefonului.

**Service-uri aprobate:** Numai service-urile aprobate pot repara telefoanele mobile. Daca desfaceti telefonul si incercati sa-l reparati singuri veti pierde garantia produsului.

**Accesorii si baterii:** Numai accesoriile si bateriile aprobate de producator pot fi folosite.

**Apeluri de urgenta:** Asigurati-va ca telefonul este pornit si activat daca doriti sa efectuati un Apel de Urgenta la 112, apasati tasta de apel si confirmati locatia, explicati ce s-a intamplat si nu inchideti convorbirea.

**Bateria si incarcarea bateriei:** Se recomanda incarcarea completa a bateriei inainte de prima utilizare a dispozitivului. Nu expuneti bateria la temperaturi mai mari de +40°C. Nu aruncati bateria in foc sau la intamplare. Returnati bateriile defecte la furnizor sau la centrele speciale ptr.colectarea bateriilor defecte.

**Atentie:** Nu ne asumam responsabilitatea pentru situatiile in care telefonul este folosit in alt mod decat cel prevazut in manual.

Compania noastra isi rezerva dreptul de a aduce modificari in continutul manualului fara a face public acest lucru. Aceste modificari vor fi afisate pe siteul companiei la produsul la care se aduc modificari.

Continutul acestui manual poate fi diferit de cel existent in produs. In acest caz, ultimul va fi luat in considerare.

## PRIMA UTILIZARE

### **Nota instalare baterie**

Inainte de a scoate bateria, asigurati-va ca deja ati oprit telefonul.

### **Instalare sau schimbare cartele SIM**

1. Inainte de schimbarea cartelei SIM, asigurati-va ca ati oprit telefonul si ati scos bateria.
2. Introduceti cartela SIM cu suprafata contactelor aurite in jos.

### **Incarcarea bateriei**

1. Inainte de incarcarea bateriei, asigurati-va ca bateria este introdusa corect in telefon.
2. Conectati mufa incarcatorului la conectorul telefonului, apoi conectati incarcatorul la priza de 220V.
3. Daca telefonul este oprit oprit in timpul incarcarii, indicatorul de incarcare este afisat pe ecran. Daca

telefonul este pornit, acesta poate fi folosit in timpul incarcarii. Cand bateria este complet incarcata, indicatorul de incarcare este plin. La prima folosire a telefonului, va rugam descarcati, apoi incarcati complet bateria. Repetati acest proces de 3 ori pentru a atinge performanta maxima a bateriei.

4. Daca telefonul nu a fost utilizat pentru o perioada lunga de timp si bateria este complet descarcata, este posibil ca ecranul sa ramana inchis in primele minute ale incarcarii.

## APELARE

### Taste

- Blocare/deblocare tastatura: apasati butonul drept pentru acces rapid, apoi apasati tasta #.
- Tasta “\*”, “0” si tasta “#”:

Functiile pot varia in functie de context:

- In introducere text, apasati “\*” pentru simboluri si “#” pentru a comuta metodele de introducere.
- In modul stand-by, tineti apasata tasta “#” pentru a comuta in modul Silentios.
- In modul stand-by si in modul de apelare, tineti apasata tasta “\*” pentru introducerea caracterelor +,

P sau W.

- In modul stand-by tineti apasata tasta “0” pentru a activa/dezactiva modul Salvare energie.

### Meniu principal

Cand apasati butonul Meniu, veti accesa meniul principal al telefonului. Apasati butoanele de navigare pentru selectarea diferitelor aplicatii.

### Apelare

Efectuarea unui apel:



1. Din modul stand-by, tastati numarul de telefon. Daca doriti sa modificati numarul, apasati butoanele stanga-dreapta pentru a muta cursorul si apasati Stergere.

2. Apasati tasta Apelare pentru a initia apelul.

Apelarea unui numar din Agenda:

Puteti accesa lista contactelor din meniul principal, tastati prima litera a contactului dorit. Alegeti numarul si apasati butonul de apelare.

Apelare din lista de apeluri efectuate, primite sau nepreluete:

1. Din modul stand-by, apasati butonul de apelare pentru afisarea listei de apeluri.

2. Alegeti un numar si apasati tasta de apelare.

Apelarea folosind meniul:

1. Din modul stand-by, accesati meniul de aplicatii si deschideti Centru de apel.

2. Alegeti un numar din apelurile efectuate, nepreluete sau primite.

3. Apasati butonul de apelare pentru initierea apelului.

### **Preluare apel**

Apasati butonul de apelare pentru preluarea unui apel.

### **Optiuni apelare**

Unele optiuni sunt permise sau restrictionate de catre operatorul de telefonie mobila. In timpul apelului apasati Optiuni si alegeti una din optiunile disponibile:

Punere in asteptare: pauza apel.

Incheiere apel: incheiere apel.

Agenda: vizualizare lista de contacte.

Registru apeluri: afisare lista de apeluri.

Mesaje: To explore the Messaging Menu.

Inregistrare audio: inregistrare sunet.

Fara sunet: dezactivare microfon.

Volum: ajustare volum in casca.

## **METODA DE INTRODUCERE TEXT**

Pe scurt:

Metodele de introducere disponibile sunt: abc, es, ro.

Definirea tastelor:

Tasta stanga: Intrare sau OK.

Tasta dreapta: Inapoi sau Renuntare.

Taste de navigare: Mutare cursor sau selectare cuvânt/opțiune.

Tasta #: Comutare metode de introducere.

Tastele 2-9: Introducere caractere.

Tasta \*: Introducere semne de punctuație.

## **LISTA FUNCTII**

### **Agenda**

Puteti salva contacte pe cartela SIM sau in telefon, depinzand de memoria disponibila. Puteti efectua urmatoarele operatii:

Vizualizare: detalii contact

Expediere mesaj.

Expediere mesaj multimedia.

Apelare.

Editare.

Stergere.

Copiere: Pentru copierea unui contact din telefon in cartela SIM sau invers.

Setari agenda.

### **Jurnal de apeluri**

Aici puteti verifica o lista completa a apelurilor primite, efectuate sau nepreluete. Optiuni disponibile:

Vizualizare.

Apelare: apelare din lista de apeluri.

Expediere mesaj SMS.

Expediere mesaj MMS.

Salvare in agenda: salvare ca intrare noua sau modificare contact deja existent.

Editare inainte de apel.

Stergere.

### **Administrator fisiere**

Optiuni disponibile:

- Deschidere: Vizualizare foldere din telefon.

- Format.

- Detalii: Vizualizare memorie disponibila.

### **Camera**

Aplicatia va permite efectuarea de fotografii si inregistrari video. Optiuni disponibile:

- Fotografii: vizualizare galerie de fotografii
- Setari camera: setare functie antiinterferenta si contorul de intarziere

- Setari imagine: setare dimensiune imagine si calitate
- Balans luminozitate: setare cadru de iluminare
- Mod scena: selectare mod auto sau nocturn
- Resetare setari implicite

### **Vizualizare imagini**

Optiuni disponibile:

- Vizualizare.
- Informatii imagine.
- Stil rasfoire.
- Expediere.
- Utilizare ca: fundal de ecran principal sau fundal ecran de blocare.
- Redenumire.
- Stergere.
- Sortare dupa: nume, tip, ora, dimensiune.
- Memorare: telefon sau card de memorie.

### **Player audio**

Telefonul are integrat un player audio pentru redarea fisierelor de muzica. Optiuni disponibile.

1. Redare.
2. Detalii.
3. Reimprospatare lista.
4. Setari.

### **Player video**

Telefonul are integrat un player video pentru redarea fisierelor video. Optiuni disponibile.

6. Redare.
7. Expediere.
8. Redenumire.
9. Stergere.
10. Sortare.

### **Inregistrare audio**

Permite inregistrarea audio. Accesati aplicatia de inregistrare, apasati Optiuni-> Inregistrare noua. Apasati Stop pentru salvare. Apasati Pauza pentru a opri temporar inregistrarea si Continuation pentru a relua.

### **FM Radio**

- Lista canale: Afisare lista canale. Puteti introduce, edita si afisa canalele cautate.
- Introducere manuala
- Cautare automata
- Setari

### **Mesagerie**

Puteti crea, trimite, receptiona si organiza mesaje text si multimedia.

Optiuni disponibile:

- Creare mesaj
- Mesaje primite: vizualizarea mesaje primite.
- Schite: puteti salva mesajele pentru editare sau expediere ulterioara.
- Casuta iesiri
- Mesaje expediate
- Setari mesaje

## **Browser**

Optiuni disponibile:

- f. Pagina de pornire
- g. Marcaje
- h. Cautare sau introducere URL
- i. Recente
- j. Setari: parametri WAP. Consultati operatorul pentru detalii si parametri WAP.

## **Bluetooth**

Optiuni disponibile

- 1. Stare: activat/dezactivat
- 2. Vizibilitate: pornit/oprit
- 3. Dispozitivele mele: gestionare dispozitive cuplate
- 4. Cautare dispozitiv audio: Search for audio devices.
- 5. Denumire: setati denumirea bluetooth a telefonului.
- 6. Optiuni avansat: configurare setari avansate de bluetooth.

## **Calendar**

Optiuni disponibile

- Salt la data
- Salt la azi
- Vizualizare pe saptamani

## **Alarma**

Pentru setarea alarmei:

- 3. Selectati una din alarmele predefinite

- 4. Folositi tastele de navigare sus-jos pentru setarea optiunilor
  - o Pornit/Oprit
  - o Ora
  - o Setare repetare
  - o Tip alerta.

### **Setari**

Din Setari aveti posibilitatea de a modifica diferite configurari ale dispozitivului dumneavoastra.

Optiuni disponibile:

**1. Setari SIM dual:** setati daca SIM1, SIM2 sau ambele SIM-uri sa fie active; setati modul avion.

**2. Setari telefon:** optiuni disponibile:

Data si ora: permite setarea datei si orei.

Limba: selectare limba telefon.

Metode de inserare preferate: configurarea metodei de introducere caractere.

Caracteristici afisare: setare imagine de fundal si mod afisare data/ora

Tasta dedicata: setare scurtaturi pentur butoanele tastei de navigare

Setari UART: selectati UART 1 sau UART 2.

Setari diverse: setare luminozitate LCD.

### **3. Setari retea**

Optiuni disponibile:

Setari retea SIM1/2: cautare, selectare si mod selectare.

Transfer preferat GPRS: conexiune prin date sau prin apel

### **4. Setari de securitate**

Securitate SIM:

- Blocare PIN.
- Schimbare PIN: modificare cod PIN.
- Schimbare PIN2: modificare cod PIN2.

Securitate telefon: blocare telefon si optiuni de modificare parola

Blocare automata a tastaturii: setare interval blocare tastatura

### **Conectivitate**

Bluetooth: activare/dezactivare functie si setari de parametri

Cont de date: setari parametri pentru conexiunile de date mobile

### **Resetare la parametri initiali**

Selectarea acestei optiuni solicita introducerea codului de siguranta al telefonului. Codul implicit este "1122".

## **DE LUAT IN CONSIDERARE**

### **Attentionari de operare**

IMPORTANT!. Cititi aceste informatii inainte de utilizarea telefonului:

**Posibilitate de explozie in anumite zone:** Opriti telefonul mobil cand va aflati in zone cu potential inflamabil ca statii de alimentare cu combustibil, puncti ale navelor, depozite de substante inflamabile, instalatii de sablare.

**Interferente cu aparate medicale si dispozitive electronice:** Majoritatea, dar nu toate dispozitivele electronice sunt ecranate impotriva semnalelor radio.

**Siguranta audio:** Acest telefon poate reproduce sunete puternice care va pot afecta auzul. Cand folositi



telefonul in modul Difuzor, se recomanda amplasarea aparatului la o distanta rezonabila, de ureche.

**Alte dispozitive medicale:** Daca folositi un aparat medical personal, consultati fabricantul pentru obtinerea informatiilor referitoare la ecranajul aparatului. Opriti telefonul in spitale sau in unitati de sanatate in care se impune acest lucru.

**Instructiuni de manevrare si utilizare:** Sunteti responsabil pentru modalitatea in care utilizati telefonul.

Trebuie sa opriti telefonul in zonele in care este interzisa utilizarea acestor dispozitive.

Feriti telefonul de praf si umezeala sau murdarie.

Nu apropiati telefonul sau accesoriile lui de foc.

Nu scapati, aruncati sau indoiti telefonul sau accesoriile lui.

Nu folositi solventi, aerosoli sau chimicale pentru curatarea telefonului.

Nu incercati sa dezamblati telefonul sau accesoriile lui; doar personalul calificat poate efectua astfel de operatiuni.

**Bateria:** Telefonul include o baterie interna cu litiu-ion sau cu litiu-polimer. Unele aplicatii necesita o cantitate mare de energie ceea ce va duce la o descarcare mai rapida a bateriei. Depozitarea telefonului sau a bateriei trebuie sa se efectueze conform legislatiei referitoare la bateriile cu litiu-ion sau litiu-polimer.

**Produce defecte:** Nu dezamblati personal telefonul sau accesoriile lui. Doar personalul calificat poate efectua operatiuni de reparatii. Daca telefonul a fost udat, lovit sau crapat, nu incercati sa il porniti pana la vizitarea unui centru de reparatii autorizat.

## SPECIFICATII

<b>General</b>	Retea 2G	GSM 900/1800 Mhz
<b>Dimensiuni</b>	Dimensiuni	118,98x51,93x11,91 mm
	Greutate	80 g
<b>Display</b>	Tip	TFT, 262 K culori
	Dimensiuni	240 x 320 px, 2.4"
<b>Sunet</b>	Tipuri alerta	Vibratii; Sunet
	Difuzor	Da
	Stereo	Da ( prin casti- jack 3.5 mm)
<b>Memorie</b>	Agenda	300 intrari
	Externa	microSD, pana la 32GB (cardul nu este inclus in pachet)
<b>Data</b>	Bluetooth	Da (2.0) cu A2DP si EDR
	USB	Da (2.0, micro USB)
<b>Camera</b>	Principala	VGA
	Secundara	Nu
	Zoom digital	Da
<b>Caracteristici</b>	Mesaie	SMS, MMS
	Radio FM	Da
	WAP	Da
	Jocuri	Nu

	Ceas	Da
	Alarma	Da
	Calculator	Da
	Reportofon	Da
<b>Baterie</b>	Tip	Li-Ion 1000 mAh
	Stand-by	Pana la 140 ore
	Convorbire	Pana la 315 minute
<b>Continut</b>	Telefon dual sim M7-Start;	
	Manual utilizare;	
	Certificat garantie;	
	Acumulator 1000 mAh;	
	Casti;	
	Cablul de date USB;	
	Alimentator 220V/5V 500mA	

## DECLARATIE DE CONFORMITATE

NR.1277

Noi Visual Fan SRL, cu sediul social in Brasov, Str Brazilor nr61, 500313 Romania, inregistrata la Reg. Com. Brasov sub nr. J08/818/2002, CUI RO14724950, in calitate de importator, asiguram, garantam si declaram pe proprie raspundere, conform prevederilor art. 4 HG nr.1.022/2002 privind regimul produselor si serviciilor care pot pune in pericol viata sanatatea, securitatea muncii si protectia muncii ca produsul M7

Start, telefon mobil marca ALLVIEW, nu pune in pericol viata, sanatatea, securitatea muncii, nu produce impact negativ asupra mediului si este in conformitate cu:

- Directiva nr. 2011/65/UE privind restrictiile de utilizare a anumitor substante periculoase in echipamentele electrice si electronice.

- Directiva privind echipamente radio si de telecomunicatii R&TTE 1999/5/CEE (HG 88/303)

- Directiva privind asigurarea utilizatorilor de echipamente de joasa tensiune 73/32/CEE , modificata de Directiva 93/68/CEE (HG457/2003)

- Directiva cu privire la compatibilitatea electromagnetica 89/336/CEE, modificate de Directiva 92/31/CEE si 93/68/CEE (HG497/2003)

- Cerintele de siguranta ale Directivei Europene 2001/95/EC si a standardelor EN 60065:2002/A12:2011 si EN 60950-1:2006/A12:2011, referitor la nivelul de decibeli emis de aparatele comercializate.

Produsul a fost evaluat conform urmatoarelor standarde:

- Sanatate EN 50360, EN 50361

- Siguranta EN 6095-1

- EMC EN 301 489-1/-7/-17

- Spectru radio EN 301511, EN 300328

Produsul are aplicat marcajul CE.

Procedura de evaluare a conformitatii a fost efectuata in conformitate cu prevederile Anexei II a HG nr. 88/2003, documentatia fiind depozitata la SC Visual Fan SRL, Brasov str. Brazilor nr.61, 500313.

Declaratia de conformitate este disponibila la adresa [www.allviewmobile.com](http://www.allviewmobile.com)

**CE 0700**

**Valoare SAR maxim: 1,289W/kg**

**Director  
Gheorghe Cotuna**

